

Iso Technical Specification

Soap Dish & Toothbrush Holder/Tumbler


DN0744 & DN0745

DN0766 & DN0767

Stock Numbers:

- q **DN0744CH – Toothbrush Holder/Tumbler**
Chrome Finish
- q **DN0744BN – Toothbrush Holder/Tumbler**
Brushed Nickel Finish
- q **DN0745CH – Toothbrush Holder/Tumbler**
Chrome Finish
Glass Tumbler
- q **DN0745BN – Toothbrush Holder/Tumbler**
Brushed Nickel Finish
Glass Tumbler
- q **DN0766CH – Soap Dish**
Chrome Finish
- q **DN0766BN – Soap Dish**
Brushed Nickel Finish
- q **DN0767CH – Soap Dish**
Chrome Finish
Glass Dish
- q **DN0767BN – Soap Dish**
Brushed Nickel Finish
Glass Dish

Dimensions:

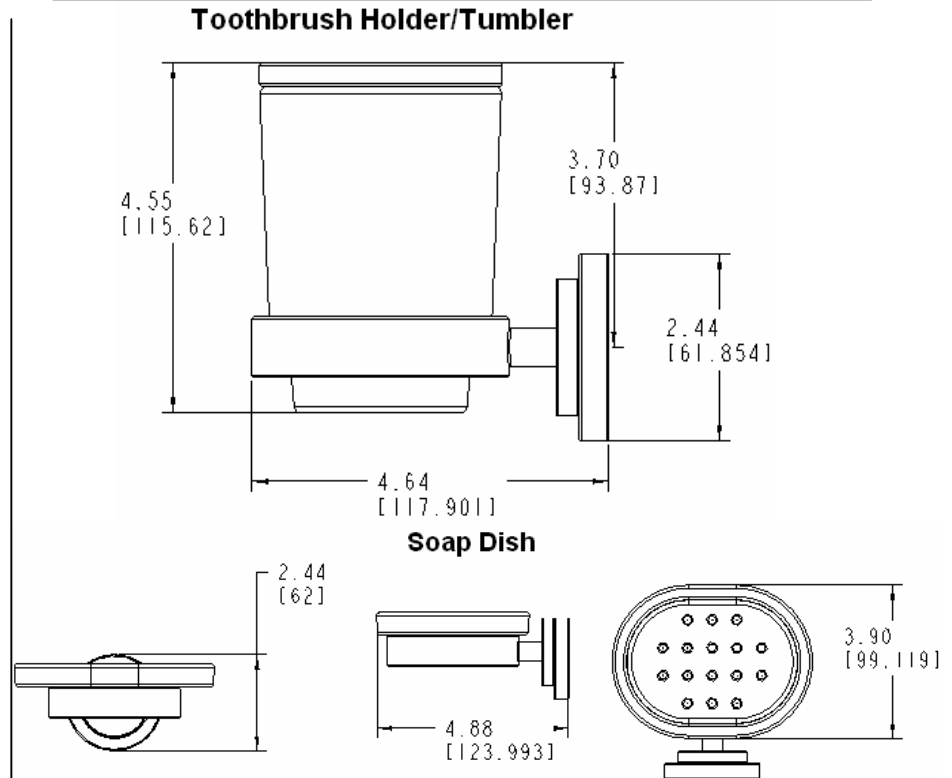

Materials:

Toothbrush holder/Tumbler and Soap dish posts are constructed of zinc. DN0744 tumbler is constructed of plastic. DN0745 tumbler is constructed of glass. DN0766 dish is constructed of plastic. DN0767 dish is constructed of glass.

Installation Instructions:

Directions below are for installation into drywall. If installing product into a stud, use the wood screws only.

1. Remove the mounting posts from the product assemblies by loosening each setscrew.
2. Position the mounting plate on the wall at desired location with "UP" facing you. Mark hole locations.
3. Drill two holes as marked using a 5/16" drill bit.
4. Fold ends of the plastic toggle together and insert into each hole in the wall.
5. Lightly tap anchors until flush with the wall.
6. One at a time, insert plastic pin into each of the anchors and lightly tap to activate anchor. Remove pin and repeat on the other anchors.
7. Place the mounting plate on the wall over the installed wall anchors with "UP" facing you.
8. Tighten screws.
9. Please decorative product over the mounting plate with the setscrew facing down. Tighten setscrew.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number: _____ **Liquid Soap Dispenser & Toothbrush Holder By Creative Specialties**



25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070
CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636
INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726
CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720
WWW.CSI.MOEN.COM

©Copyright Creative Specialties International

Literature #BA1402